



**Davey PowerMaster 200, 250, 350, 450**  
(Including 415V 3 phase model)



Davey PowerMaster's are suitable for connection to a nominal 240 (for 415 volt refer to page 7) volt 50Hz power supply and are equipped with a flex and 3 pin plug. If a power outlet is not available within 3 metres of the pump, a 3 pin power point in a safe, dry place, may need to be provided by an electrician. Extension cords are unsafe around pools - and should be avoided. If the supply cord of this product is damaged it must be replaced by the Dealer or manufacturer, with genuine Davey spares.

### **Davey Repair or Replacement Guarantee**

 Barrel unions need to be hand tightened. No sealant, glues or silicones are required.


### Starting the Pump

To operate efficiently and prevent pump damage there must be a free flow of water to and from the pump. Before starting ensure that:

- all pipework is correctly sealed.
  - the pool/spa water level is at the correct height.
  - that all appropriate valves are open and there is nothing preventing the flow of water through the system.
1. First prime the pump by removing the strainer basket lid and filling the strainer basket area with water. Replace the lid, ensuring that it seals on the large oring.
  2. Connect to the power supply and switch on.
  3. Allow the pump to run, so that any air trapped may be expelled.
  4. If prime is not established within approximately two minutes, as evidenced by a strong flow of water, switch off the pump and repeat the procedure. Continued evidence of air under the strainer basket lid indicates an air leak in the suction piping which should be rectified to avoid pump damage.

### Pump operation

For optimum pump performance, the strainer basket housing should always be full of water and free from air bubbles. The water level of the pool should always be maintained to at least halfway up the skimmer box ensuring water is in the pump at all times. From time to time it may be necessary to re-prime the pump. This should be carried out as described above.



**Never run pump dry. Running the pump with no water may damage the mechanical seals, causing leakage and flooding. Dry running damage and associated damage is not covered under warranty.**


### Emptying the Strainer Basket

The strainer basket should be inspected frequently through the transparent lid and emptied when a build up of rubbish is evident. The directions below should be followed.

1. Switch off pump.
2. Unscrew the strainer basket lid anti-clockwise and remove.
3. Remove the strainer basket by lifting upwards from its housing.
4. Empty the trapped refuse from the basket. Hose out with water if necessary.
5. Check the strainer basket for cracks, replace the strainer basket in the pump if OK.
6. Replace the lid and ensure that it seals on the large rubber oring. **Firm hand tightness only is required.** The oring & thread can be lubricated with Hydra slip or equivalent products.



**Failure to undertake regular maintenance may cause damage not covered by warranty.**



**Power supply to this pump needs to be through an isolating transformer on RCD, having a rated operating current not exceeding 30mA.**

### Trouble Shooting

**If the pump runs but there is no water flow or water flow is reduced, the following condition may apply:**

1. The filter requires backwashing or it is blocked. Refer to the relevant section in the Filter Manual.
2. The pump is not primed. Re-prime as per instruction in 'Starting the pump'
3. There are air leaks in the suction piping. Check all piping and eliminate leaks, also check for a loose strainer basket lid. Air bubbles in the water flowing back to the pool would indicate a leak in the suction to the pump allowing air to enter the pipework.
4. A leaking pump shaft seal may also prevent operating. Evidence of this would be water on the ground under the pump.
5. The pump is not able to get water from the pool. Check that the valves to the pump are fully open and that the pool water level is up to the skimmer box.
6. Blockage in the piping or pump. Remove the strainer basket and check for any blockage to the pump impeller entry. Check the skimmer box for blockage.


**If the pump does not operate, the following conditions may apply:**

1. The power is not connected. For 240 volt only, check the power point by plugging in a portable appliance to ensure power is available. Also check fuses and the main power supply switch
  2. Automatic overload is tripped. The pump has an in-built thermal overload which will re-set automatically after the motor has cooled following an overheating period. Determine the cause of the overload tripping and rectify.
  3. Blockage is preventing the pump from rotating.
  4. Motor is burnt out - burning smell is evident. Replacement is required.
- If you are unable to resolve any installation or operation difficulties with your PowerMaster, contact the supplier from whom the pump was purchased or your nearest Authorised Davey Pool Equipment Service Centre. If any further assistance is required, contact the Davey Customer Service Centre at the address indicated in this manual.

### Removal of the Pump from Pipework


Should it be necessary to remove the pump, follow these instructions:

1. Switch off the power and remove the plug from the power source.



**NOTE: If the pump is wired into a time clock or another automatic control, the wiring should be removed by a qualified electrician.**

2. Close the water valves on the pool return and the pump inlet pipework.
3. Remove the discharge & suction barrel unions taking care not to lose the orings.
4. Move the pipework with the barrel unions attached until the pump can be pulled clear.



**NOTE: When making any enquiries about your PowerMaster be certain to quote the model number from the nameplate located on motor.**


### Water Quality

Maintaining balanced water chemistry is important to the life of your pool pump. This pump is designed to be used with Pool & Spa water, balanced in accordance with Langelier Saturation Index, with a pH level of between 7.2 and 7.8 and is regularly treated with a chlorine sanitising agent with the level not exceeding 3000PPM.

Please consult your local pool shop regularly to have your water tested.

### Three Phase Power Connection

Three phase models are designed for connection to a nominal 415V power supply, but must be wired with a contactor with 'quick-trip' overloads set at 4.3 amps. Davey recommend the use of overloads which also have the ability to detect "single phasing" or "dropped phase" conditions in the power supply. Three phase PM450 models have been designed to allow for connection either side of the capacitor cover (marked "A" in figure one) on the motor.



**NOTE: Three phase motors do not have capacitors fitted in the capacitor cover.**

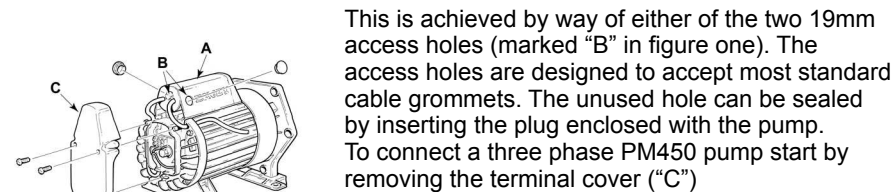


Figure One

Insert the blanking grommet ("F") into the capacitor cover ("A"). Fix the short lead ("D") into the path provided in the non-drive end-shield and replace the terminal cover ("C").

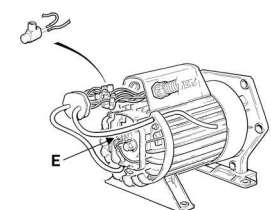


Figure Three

This is achieved by way of either of the two 19mm access holes (marked "B" in figure one). The access holes are designed to accept most standard cable grommets. The unused hole can be sealed by inserting the plug enclosed with the pump. To connect a three phase PM450 pump start by removing the terminal cover ("C")

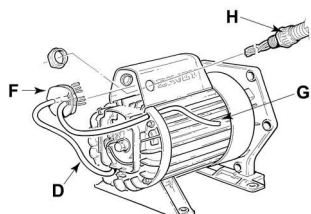




Figure Two

A short four core flex ("D") is fitted from the motor terminals ("E"). This lead is inserted through the blanking grommet ("F"). Pressure switch or other control leads ("G") can be fitted as well. Incoming power ("H") can be fitted through the preferred access hole, and terminated as shown in Figure Three. A termination kit is available if required.




**IMPORTANT NOTE:- THREE PHASE MODELS ONLY**  
**BEFORE FINALISING WIRING CONNECTIONS, CHECK THAT THE MOTOR ROTATES IN DIRECTION OF ARROW (CLOCKWISE WHEN THE SHAFT IS VIEWED FROM THE WIRING CONNECTION END). TO ALTER ROTATION, CHANGE ANY TWO POWER LEADS AT MOTOR TERMINALS.**


When the unit is connected and operating the phase balance should be checked. This should be within 5% variation. "Rolling" the leads may help to improve a small unbalance, but major phase unbalance will usually be attributable to an input power unbalance. This must be addressed before the pump is used.



**POWER CONNECTIONS AND WIRING MUST BE CARRIED OUT BY AN AUTHORISED ELECTRICIAN.**




**DANGER - Hazardous suction. Do not block water entry into filtration system with any part of your body as the pressure can trap hair or body parts, causing severe injury or death. Do not block suction. Turn off pump immediately if someone becomes trapped.**



**Caution! Do not add chemicals directly to the pool skimmer. Adding undiluted chemicals may damage pump and filter and void warranty.**




**Small children using the pool or spa must ALWAYS have close adult supervision.**



**Routine Maintenance tasks – to maximise the life of your pool equipment & personal safety, use this checklist once a week. Turn pump off first.**

- a. Make sure that any pressure gauges are in working condition and the operating pressure is within limits as specified on the product.
- b. Make sure that each suction inlet, and main drain has a cover that is securely attached and in safe working condition.
- c. Make sure that all skimmer covers are securely attached and in safe working condition. These should be replaced every 3 to 4 years.
- d. Remove any obstructions or debris from the main drain cover.
- e. Ensure the skimmer baskets and the pump hair and lint pots are free of leaves and debris at least once a week.
- f. Remove obstructions and combustibles from around the pump motor.
- g. Make sure all wiring connections are clean and that all wiring and electrical equipment is in good condition. Damaged wiring must be repaired or replaced by a qualified electrician as soon as damage is discovered.
- h. Check water balance and sanitiser levels at your local pool shop.



**WARNING! Pump suction is hazardous and can trap and drown or dis-embowel bathers. Do not block suction. Do not use or operate swimming pools, spas or spa baths if a suction cover is broken, missing or loose. Two suction covers and inlets must be provided into every pump to avoid suction entrapment.**