GLOSSARY

A. **UNIVERSAL TAP ADAPTOR**
B. **TAP CONNECTION**
C. **UNION NUT**
D. **CONTROL DIALS**
E. **BATTERY COMPARTMENT**
F. **SNAP-ON HOSE CONNECTION**
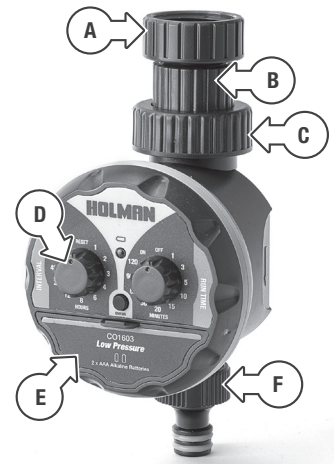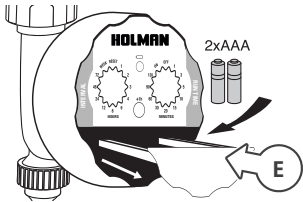
INSTALLATION

Make sure the filter (washer) is in place, then screw the *Low Pressure Tap Timer* to the tap with the **UNIVERSAL TAP ADAPTOR** end, turn it clockwise (hand tighten only). Connect the **SNAP-ON HOSE CONNECTION** end to your garden hose or system.

BATTERY INSTALLATION

Hold the *Tap Timer* with the **BATTERY COMPARTMENT** facing you

Remove the **BATTERY COMPARTMENT** cover and the battery tray

1. Insert 2 x AAA alkaline batteries

2. Insert the battery tray and replace the **BATTERY COMPARTMENT** cover. Ensure the battery compartment stays dry

PROGRAMMING CONTROLS

The *Low Pressure Tap Timer* is programmed using three individual controls. The **LEFT** dial can be turned to select the **INTERVAL** of watering. This is how frequently you want to water. The **RIGHT** dial can be turned to select the **RUN TIME**, this is how long you want the *Tap Timer* to run for.

The **ENTER** button performs two tasks:

1. Press the **ENTER** button to confirm your selections, activating the watering operation. You must hold the **ENTER** button for 3 seconds and the LED will flash

2. **ENTER** can be pressed again after confirming **INTERVAL** and **RUN TIME** and to move the watering **START TIME** forwards by 1 hour to delay it

Every press adds 1 extra hour to your start time (optional). The LED will flash every time you press the **ENTER**' button to confirm

ℹ The *Tap Timer* will not run immediately after the program is set. Program will commence after the chosen interval duration has lapsed once.
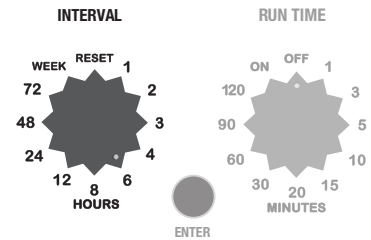

SET AUTOMATIC WATERING

1. SET THE WATERING INTERVAL

You can adjust the frequency of watering (**INTERVAL**) from 1 hour to 7 days.

To select the frequency, turn the **INTERVAL** dial and select the desired time.

SET AUTOMATIC WATERING CONT.

2. SET THE WATERING RUN TIME

You can adjust the duration of watering (**RUN TIME**) from 1 to 120 minutes.

To select the duration of watering, turn the **RUN TIME** dial from **OFF** to the desired minutes.

3. CONFIRM THE WATERING OPERATION

Once you have made your selections, press and hold the **ENTER** button for 3 seconds until you see the LED light appear solid. This will now have confirmed the watering operation.

AUTOMATIC WATERING DELAY

To set a delay in the **START TIME** for watering, immediately after confirming your watering operation, you can press the **ENTER** button again to delay the watering by 1 hour.

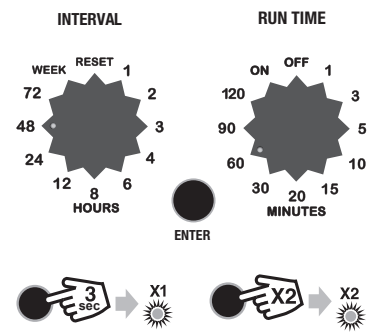## AUTOMATIC WATERING DELAY CONT.

Each press equals 1 extra hours delay. This can be added from 0 - 23 hours depending on your requirements. Each press will be followed by the LED flashing once for confirmation.

1X 👆 = +1HR
2X 👆 = +2HR ...and so on.

WATERING EXAMPLE: It's 12:00 presently and you want to water at 14:00 for 60 minutes and every two days.

1. Set the watering **INTERVAL** to 48 Hours

2. Set the watering **RUN TIME** to 60 minutes

3. Press and hold **ENTER** to confirm watering operation

4. Press and hold **ENTER** twice to add 2 extra hours delay. Each press will be followed by the LED flashing once for confirmation
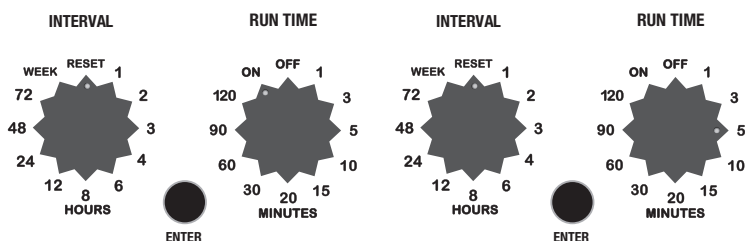

MANUAL WATERING

OPTION 1: Manual Watering

To start Manual Watering, turn the **INTERVAL** dial to **RESET**. Turn the **RUN TIME** dial to **ON**. Turn on your tap and water as needed. To stop watering, turn your tap off. Turn the **RUN TIME** dial to **OFF**, or re-enter the watering operation.

OPTION 2: Manual Watering (Auto-Stop)

To start Manual Watering with an auto-stop, turn the **INTERVAL** dial to **RESET**. Turn the **RUN TIME** dial to the desired time you wish to water for. Turn on your tap, watering will stop once **RUN TIME** minutes have lapsed.

TECHNICAL DATA

PRODUCT: Low Pressure Tap Timer

PRODUCT CODE: CO1603

MAXIMUM WATER PRESSURE: 600 kPa

BATTERY: Use 2 x AAA ALKALINE batteries

FLUID: Only use cold water with NO added chemicals

FREQUENCY OPTIONS: Every 1 hrs, 2 hrs, 3 hrs, 4 hrs, 6 hrs, 8 hrs, 12 hrs, 24 hrs, 48 hrs, 72 hrs, Week, Reset

RUN TIME OPTIONS: 1, 3, 5, 10, 15, 20, 30, 60, 90, 120, ON, OFF

WARNINGS: Do not use this device without the appropriate filter

Every 4 seconds the LED will flash to confirm the battery is working. If the LED flashes any quicker, please replace the batteries

We really appreciate having you as a customer, and would like to say thank you for choosing us. Should you have any questions about this product or its operation please call customer service on 1300 716 188

HOLMAN

For the #SMARTGARDENER ▶ 📷 f